CONSTRUCTOR

WWW.CONSTRUCTORLOCKS.COM
T: (718) 499-6200; E: dsdgroup41@gmail.com

HOW TO INSTALL THIS TUBULAR LOCK

❶ MARK DOOR

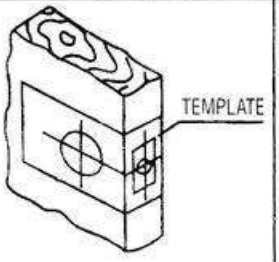

Mark site of lock and Bore.

❷ BORE HOLES

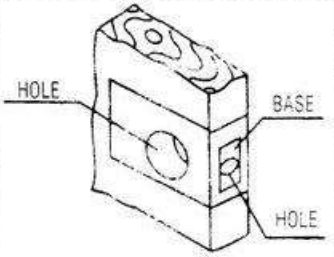

• Bore the holes through door
•• Cut out base.

❸ INSTALL LATCH

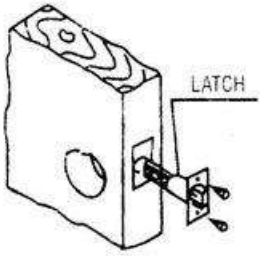

❹ INSTALL OUT-KNOB

Key hole should be in down position

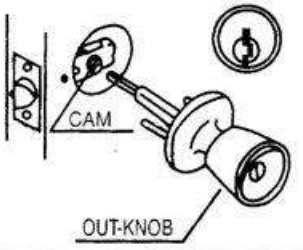

❺ INSTALL IN-KNOB

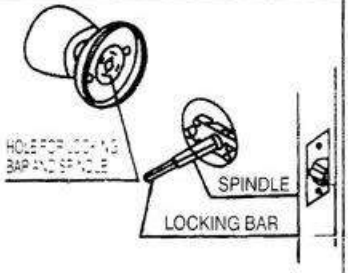

❻ INSTALL STRIKE

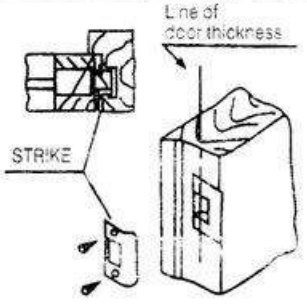

INSTRUCTION FOR ADJUSTABLE LATCH



The cam is pushed fully to the right for 70mm (2 ¾) backset. (During the adjustment keeping two teeth of the cam to forward always.)

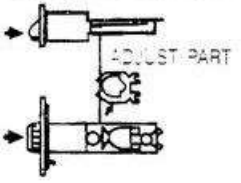

Push the latch inward, take off the adjust part for 70mm (2 ¾) backset.